PA197 Secure network design

Basic wireless networking


Petr Švenda <u>svenda@fi.muni.cz</u> Faculty of Informatics, Masaryk University

Centre for Research on Cryptography and Security

CROCS

Laboratory

- Start of implementing ad-hoc networks based on Arduino with RF module
 - Basic Arduino programming model
 - RF library send packet between two nodes
 - Neighbours discovery (logical communication group)

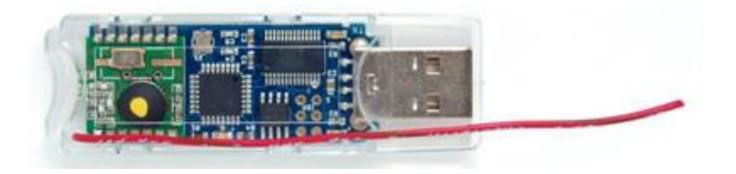

Laboratory

- Download and run Arduino IDE
 - https://www.arduino.cc/en/Main/Software
- (On Linux: usermod –a –G dialout your_username)
- Plug in JeeNode
- Select COM port
 - Can be assigned to different values
 - Try other ports if selected does not work
- Board: Arduino Mini
- Processor: ATMega328

File→Examples→01.Basics→Blink

- Basic application, should blink the LED
- During upload, Rx and Tx small leds are blinking
- After upload, blue LED should blink (1 second)
- You should now be able to compile and upload app – If LED is not blinking, check PIN value
 - Should be 9 for JeeNode => 13->9

Blink.ino

// the setup function runs once when you press reset or power the board
void setup() {

// initialize digital pin as an output.

```
pinMode(13, OUTPUT);
```

```
}
```

```
// the loop function runs over and over again forever
void loop() {
    digitalWrite(13, HIGH); // turn the LED on (HIGH is the voltage level)
    delay(1000); // wait for a second
    digitalWrite(13, LOW); // turn the LED off by making the voltage LOW
    delay(1000); // wait for a second
}
```

(Note that PIN used for LED can be different on different boards, 9 on JeeNode)

Troubleshooting

- Check if you have proper board and processor
 - Arduino Mini, ATMega328
- Don't have serial monitor running if going to upload new app
- Try to re-plug jeenode
- Try to plug into different USB port
- Try to restart Arduino IDE
- Check if you have same serial port speed on Arduino and port monitor
 - Try different speeds, otherwise you will see garbled data
- Try again (anything [©])


File→Examples ... →DigitalReadSerial

- Original code prints state of button to serial port
- Run Serial monitor
 - Will automatically restart Arduino board
 - Observe data as print out
- Modify to print out loop counter (instead of button)
 Small red LED should blink during data transfer
- You should now be able to upload application and see data via serial port
- You may use any other application to capture data
 - https://github.com/gskielian/Arduino-DataLogging/tree/master/PySerial

RF NETWORKING WITH JEELIB

JeeLib library

- Provides support for JeeNode radio module
- Download Jeelib-master.lib
 - <u>https://github.com/jcw/jeelib/archive/master.zip</u>
- Documentation: <u>http://jeelabs.org/pub/docs/jeelib/index.html</u>
- Add library into Arduino IDE
 - Sketch \rightarrow Include library \rightarrow Add .ZIP library
 - (Check Include library again, Contributed libraries)
 - Examples are now available: Examples \rightarrow jeelib-master

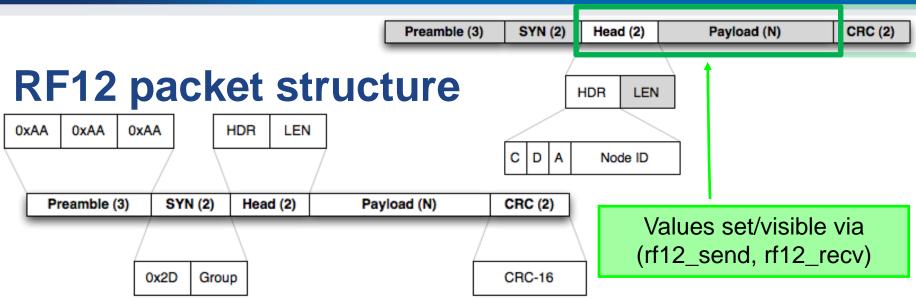

- C = CTL, D = DST, A = ACK, 5-bit node ID
 - A bit (ACK) indicates if sender wants to get ACK back
 - D bit (DST) indicates if node ID bits specify destination or source node
 - C bit (CTL) 1 if packet is ACK (and A must be 0)
- To send packet only to node with nodeID
 - rf12_sendNow(RF12_HDR_DST | nodeID, &data, dataLen);
- Warning: radio is always broadcast in nature, filtering only in driver!
- <u>http://jeelabs.org/2011/06/09/rf12-packet-format-and-design/index.html</u>
- <u>http://jeelabs.org/2011/06/10/rf12-broadcasts-and-acks/index.html</u>

#include <JeeLib.h>

test1.ino

```
const byte LED = 9;
byte counter;
```

```
// turn the on-board LED on or off
static void led (bool on) {
    pinMode(LED, OUTPUT);
    digitalWrite(LED, on ? 0 : 1); // inverted logic
}
```

```
void setup () {
```

```
// this is node 1 in net group 100 on the 868 MHz band
rf12_initialize(1, RF12_868MHZ, 100);
```

```
}
```

rf12_sendNow(RF12_HDR_DST | nodeID, ...); rf12_sendNow(RF12_HDR_DST | nodeID | RF12_HDR_ACK |, ...);

```
void loop () {
    led(true);
```

```
// actual packet send: broadcast to all, current counter, 1 byte long
rf12_sendNow(0, &counter, 1);
rf12 sendWait(1);
```

```
led(false);
```

```
// increment the counter (it'll wrap from 255 to 0)
++counter;
// let one second pass before sending out another packet
delay(1000);
File Examples jeelib-master DINJ + test1
```

Basic beacon application

- Select File→Examples→jeelib-master→DINJ→ test1
 - Compile, upload
 - Application sends packet with counter every second
- Try to change your node ID (1..31 possible)
 - rf12_initialize(1, RF12_868MHZ, 100);
 - 31 is special ID for promiscuous mode (receives everything)
- Try to change your group
 - rf12_initialize(1, RF12_868MHZ, 100);
 - You will hear only messages within your group

(Another option to monitor packets – SDR!)

				40 0 20	000					
Stop RTL-SDR	I / USB	✓ Configure	VFO U.8	68.025	000.					
Radio		<u>^</u>							Zor	om
NFM O AM	O LSB O USB	-4							3	
WFM ODSB	O CW O RAW					Mayor and a second			8	
] Shift	0 +	調							8	
	nan-Harris 4 🗸 🗸		867.200MHz	867.600MHz	868.000MHz	868.400MHz	868.800MHz	869.200MHz		
Iter bandwidth	Filter order				States and the second second				- CT	
250000 🜲	100 🜲								-	
Squelch	CW Shift								- 25	
50 🜲	600 🔤									-
	Step size								Con	tra
Snap to grid 🔽	$25kHz$ \sim								5	
Correct IQ	Swap I & Q								- 22	
FM Stereo 🔽	Mark Peaks								-	
Audio										
	-	-								
F Gain									12	
amplerate 48000	~									

Basic beacon application – send packet

- rf12_sendNow(T, &counter, 1);
 - -T = 0 is broadcast
 - T = 1..31 concrete target node ID
 - sendNow takes pointer to data and its length (&counter, 1B)
 - Busy waiting until send can be done (free channel check)
- rf12_sendWait(1);
 - Waits until a packet send is done
- Maximum length of payload data RF12_MAXDATA
 - 66 bytes, but don't push it too close (unreliable)
 - Stay below 60

Preamble (3) SYN (2) Head (2) Payload (N) HDR LEN C D A Node ID #include <Ports.h>
#include <RF12.h>

Sniffer.ino

```
byte saveHdr, saveLen, saveData[RF12_MAXDATA];
word saveCrc;
```

```
void setup () {
 Serial.begin(57600);
 Serial.println("\n[sniffer] 868 MHz group 100");
 rf12 initialize(31, RF12 868MHZ, 100);
}
void printPacket(byte saveHdr, byte saveLen, byte saveData[RF12 MAXDATA]){
// ... nice print of packet via Serial port, see full code at IS
}
void loop () {
 if (rf12 recvDone()) {
  // quickly save a copy of all volatile data
  saveLen = rf12 len;
  saveCrc = rf12 crc;
  saveHdr = rf12 hdr;
  if (saveLen <= sizeof(saveData)) { memcpy(saveData, (const void*) rf12_data, saveLen); }</pre>
  else { memset(saveData, 0xff, sizeof(saveData));}
  rf12 recvDone(); // release lock on info for next reception
```

```
if (saveCrc != 0) {
   Serial.print("CRC error #");
   Serial.println(saveLen, DEC);
} else { printPacket(saveHdr, saveLen, saveData);}
```

Sniffer application


- Download sniffer code from IS (sniffer.ino)
 - File→New, Paste sniffer code
 - Compile and upload
- App listens for RF12 packets and prints it via Serial port
 - rf12_initialize(31, RF12_868MHZ, 100);
 - rf12_recvDone() true if packet received
 - rf12_recvDone()
 - rf12_len, rf12_crc, rf12_hdr, rf12_data
 - Global variables set by radio module
 - Local copy of global variables (rf12_len \rightarrow saveLen) made to:
 - Prevent overwrite by another packet
 - Enable radio module to start receiving next packet

Basic transmission: one hop

- Pair together with one other colleague
 - Write app that will blink LED X-times based on value inside received packet
- First node is beacon sending counter
 - Send is to particular second node (not broadcast to all)
 - Use different group (than 100)
- Second node receiver blinking counter % 5
 - Use sniffer application as basic, change nodeID
 - rf12_initialize(17, RF12_868MHZ, group);
 - Don't forget to set LED output pin
- How far you can transmit? (try hall space)

18 | PA197 Security of wireless networks

Paylo

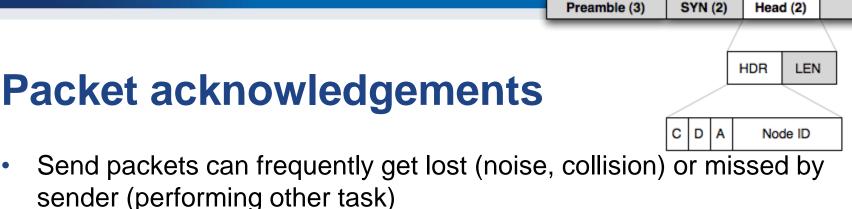

- How can be sender sure that the packet was delivered?
- Sometimes does not care (broadcast or "UDP"-like transmission)
- If care, thank special message back from receiver can be expected/required (ACK)
 - Create packet for target node with bit flag that (A)CK = 1
 - Receiver reply with special ACK packet upon successful reception
 - Same header as received packet, but with (A)CK bit = 0 and (C)TL=1

```
byte createHeader(boolean requireACK, byte destID){
    byte header = requireACK ? RF12_HDR_ACK : 0;
    header | = RF12_HDR_DST | destID;
    return header;
    if(RF12_WANTS_ACK){
        rf12_sendStart(RF12_ACK_REPLY,0,0);
    }
```

Non-discriminative jammer

- Occupies/distorts whole channel
 - Sending packets all the time without waiting for clear channel
 - No need to send correctly formatted packets or use same type of radio
- How to detect non-discriminative jammer?
 - Abnormally high number of lost packets
 - Abnormally high send waiting time (clear channel)
 - Abnormally low RSSI
 - Detection by whole channel monitoring (e.g., SDR)

Non-discriminative jammer : SDR

3DR# 01.0.0.1177	- IQ Imbalance: Gair	n = 1.000 Phase =	-0.229							×
Stop RTL-SDR	V USB	 ✓ Configure 	VF0 (), 8	68.025	5.000					
- Radio		^							Ze	noc
	O LSB O USB	-2							1	15
	O CW O RAW				and the second second	····				
Shift	0	讇							- 65	
	nan-Harris 4 🛛 🗸		867.200MHz	867.600MHz	868.000MHz	868.400MHz	868.800MHz	869.200MHz		
ilter bandwidth	Filter order								1.1	
250000 \$	100 \$								10	
Squelch	CW Shift									
50 🜲	600 \$									
	Step size								Cor	ntra
Snap to grid 🔽	25 kHz ~									Г
Correct IQ	Swap I & Q 📃									
FM Stereo 🔽	Mark Peaks									
Audio									- 22 -	
F Gain									13	
	STATES IN A								1	
amplerate 48000	~									
Dut Windo	ws Direct Sound	~								