

## SAFETY GUIDE

**Please follow all the precautions listed below for safety and to reduce the risk of fire, injury or electrical shock.**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach to children less than 8 years.
- This appliance is intended to be used in household and similar applications such as : Staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Do not touch the body of the toaster when it is hot.
- Disconnect the appliance at the mains supply when filling or emptying the toaster, before cleaning, adjusting or removing any components, and when it is not in use.

- The toaster must not be operated by means of an external timer or separate remote-control system.
- Do not immerse the appliance, connecting cord or plug in water or liquids.
- Do not cover the appliance when it is in use, or has recently been used.
- Do not place this appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not insert oversize items, foil packages or metal implements in the toaster wells.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
- Do not let the connecting cord overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.
- Do not attempt to change the appliance connecting cord. Refer this to qualified service personnel as specialist tools are necessary.
- If any part of this appliance is visibly damaged or malfunctions in any way, or the connecting cord or mains plug is broken do not continue to use it. Take it to a qualified service centre for service and repair.

## SAFETY GUIDE

## Please

The toaster

Do not

Do not

Do not

Do not

Do not attempt to change

any part of this

Do not

Disconnect