
Lab 5.5.3: Troubleshooting Spanning Tree Protocol

Topology Diagram

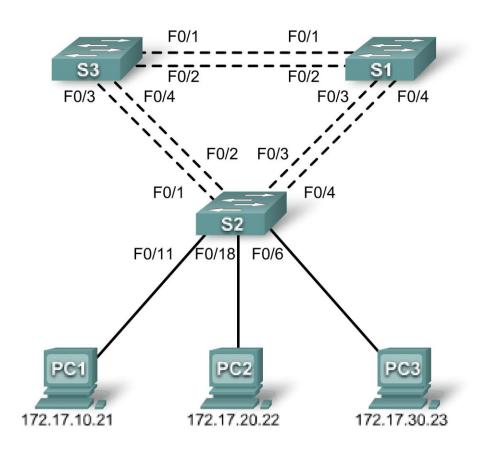

Addressing Table

Device (Hostname)	Interface	IP Address	Subnet Mask	Default Gateway
S1	VLAN 99	172.17.99.11	255.255.255.0	N/A
S2	VLAN 99	172.17.99.12	255.255.255.0	N/A
S 3	VLAN 99	172.17.99.13	255.255.255.0	N/A
PC1	NIC	172.17.10.21	255.255.255.0	172.17.10.1
PC2	NIC	172.17.20.22	255.255.255.0	172.17.20.1
PC3	NIC	172.17.30.23	255.255.255.0	172.17.30.1

Port Assignments - Switch 2

Ports	Assignment	Network
Fa0/1 - 0/4	802.1q Trunks (Native VLAN 99)	172.17.99.0 /24
Fa0/5 - 0/10	VLAN 30 – Guest (Default)	172.17.30.0 /24
Fa0/11 - 0/17	VLAN 10 – Faculty/Staff	172.17.10.0 /24
Fa0/18 - 0/24	VLAN 20 – Students	172.17.20.0 /24

Learning Objectives

Upon completion of this lab, you will be able to:

- Analyze a congestion problem in a redundant, switched LAN network.
- Recognize the capabilities for per-VLAN load balancing with PVST.
- Modify the default STP configuration to optimize available bandwidth.
- Verify that modifications have had the intended effect.

Scenario

You are responsible for the operation of the redundant switched LAN shown in the topology diagram. You and your users have been observing increased latency during peak usage times, and your analysis points to congested trunks. You recognize that of the six trunks configured, only two are forwarding packets in the default STP configuration currently running. The solution to this problem requires more effective use of the available trunks. The PVST+ feature of Cisco switches provides the required flexibility to distribute the inter-switch traffic using all six trunks.

This lab is complete when all wired trunks are carrying traffic, and all three switches are participating in per-VLAN load balancing for the three user VLANs.

Task 1: Prepare the Network

Step 1: Cable a network that is similar to the one in the topology diagram.

You can use any current switch in your lab as long as it has the required interfaces shown in the topology diagram. The output shown in this lab is based on Cisco 2960 switches. Other switch models may produce different output.

Set up console connections to all three switches.

Step 2: Clear any existing configurations on the switches.

Clear NVRAM, delete the vlan.dat file, and reload the switches.

Step 3: Load the switches with the following script:

S1 Configuration

hostname S1 enable secret class

```
no ip domain-lookup
vtp mode server
vtp domain Lab5
vtp password cisco
vlan 99
name Management
exit
vlan 10
name Faculty/Staff
exit
vlan 20
name Students
exit
vlan 30
name Guest
exit
interface FastEthernet0/1
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
interface FastEthernet0/2
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
interface FastEthernet0/3
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
interface FastEthernet0/4
 switchport trunk native vlan 99
switchport mode trunk
no shutdown
interface range FastEthernet0/5-24
shutdown
interface GigabitEthernet0/1
shutdown
interface GigabitEthernet0/2
shutdown
interface Vlan99
ip address 172.17.99.11 255.255.255.0
no shutdown
!
line con 0
```

```
logging synchronous password cisco login line vty 0 no login line vty 1 4 password cisco login line vty 5 15 password cisco login ! end
```

S2 Configuration

```
hostname S2
enable secret class
no ip domain-lookup
vtp mode client
vtp domain Lab5
vtp password cisco
1
interface FastEthernet0/1
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
interface FastEthernet0/2
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
interface FastEthernet0/3
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
!
interface FastEthernet0/4
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
interface range FastEthernet0/5 - 10
 switchport access vlan 30
 switchport mode access
1
interface range FastEthernet0/11 - 17
 switchport access vlan 10
 switchport mode access
interface range FastEthernet0/18 - 24
 switchport access vlan 20
```

```
switchport mode access
1
interface fa0/6
no shutdown
interface fa0/11
no shutdown
interface fa0/18
no shutdown
interface Vlan99
 ip address 172.17.99.12 255.255.255.0
no shutdown
line con 0
password cisco
 logging synchronous
 login
line vty 0 4
password cisco
login
line vty 5 15
password cisco
```

S3 Configuration

```
hostname S3
enable secret class
no ip domain-lookup
vtp mode client
vtp domain Lab5
vtp password cisco
interface FastEthernet0/1
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
interface FastEthernet0/2
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
interface FastEthernet0/3
 switchport trunk native vlan 99
 switchport mode trunk
no shutdown
interface FastEthernet0/4
 switchport trunk native vlan 99
switchport mode trunk
no shutdown
!
interface range FastEthernet0/5 - 10
```

```
switchport access vlan 30
 switchport mode access
interface range FastEthernet0/11 - 17
 switchport access vlan 10
 switchport mode access
interface range FastEthernet0/18 - 24
 switchport access vlan 20
 switchport mode access
interface Vlan99
ip address 172.17.99.13 255.255.255.0
no shutdown
line con 0
password cisco
login
line vty 0 4
password cisco
login
line vty 5 15
 password cisco
 login
end
```

Task 2: Configure Host PCs

Configure the Ethernet interfaces of PC1, PC2, and PC3 with the IP address, subnet mask, and gateway indicated in the addressing table.

Task 3: Identify the Initial State of All Trunks

On each of the switches, display the spanning tree table with the **show spanning-tree** command. Note which ports are forwarding on each switch, and identify which trunks are not being used in the default configuration. You can use your network topology drawing to document the initial state of all trunk ports.

Task 4: Modify Spanning Tree to Achieve Load Balancing

Modify the spanning tree configuration so that all six trunks are in use. Assume that the three user LANs (10, 20, and 30) carry an equal amount of traffic. Aim for a solution that will have a different set of ports forwarding for each of the three user VLANs. At a minimum, each of the three user VLANs should have a different switch as the root of the spanning tree.

Task 5: Document the Switch Configuration

When you have completed your solution, capture the output of the **show run** command and save it to a text file for each switch.

Task 6: Clean Up

Erase the configurations and reload the switches. Disconnect and store the cabling. For PC hosts that are normally connected to other networks (such as the school LAN or to the Internet), reconnect the appropriate cabling and restore the TCP/IP settings.